

SERVICE REMINDERS

2022 HR-V e:HEV

Service Type	Maintenance Items	Left Hand Drive	Right Hand Drive
A	Replace engine oil and oil filter	0.5	0.5
B	Check front and rear brakes Inspect tie-rod ends, steering gearbox and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines including ABS/VSA lines Inspect all fluid levels and condition of fluids Inspect exhaust system Inspect fuel lines and connections Check expiration date for TRK (Temporary Repair Kit) bottle Test drive (noise, stability, dashboard operation) Check lights alignment Inspect vehicle corrosion *1 Inspect tyre condition	0.6	0.6
2	Replace dust and pollen filter *2	0.1	0.1
3	Replace transmission fluid	0.4	0.4
4	Replace fuel filter *3	1.7	1.7
5	Replace engine coolant	0.6	0.6
7	Replace brake fluid	0.4	0.4
8	Replace air cleaner element *4 Replace spark plugs *5	0.5	0.5
9	Inspect valve clearance *6	2.1	2.7

* 1 Subtract 0.2 if symbols A and B are displayed together, to adjust for duplication.
If item B appears before one year has passed, inspect for vehicle corrosion every year.

* 2 When you drive primarily in urban areas that have high concentrations of soot in the air, under dusty conditions, or when the air flow from the heating and cooling system/climate control system becomes weak, replace the filter every 20,000 km (12,500 miles) or every year.

* 3 It is recommended that you replace the fuel filter every 110,000km (68,500 miles) if the fuel you are using is suspected to be contaminated with dust, etc. because the filter can become clogged sooner.

* 4 If you drive in dusty conditions, replace every 30,000 km (18750 miles).

* 5 If you drive at speeds over 130km/h (80 miles/h) for more than 10% of driving time, the spark plugs should be replaced every 40,000km (25,000 miles).

*6 Sensory method
Adjust the valves during service 120,000km (75,000 miles) if they are noisy.